



FOLDING INSTRUCTIONS

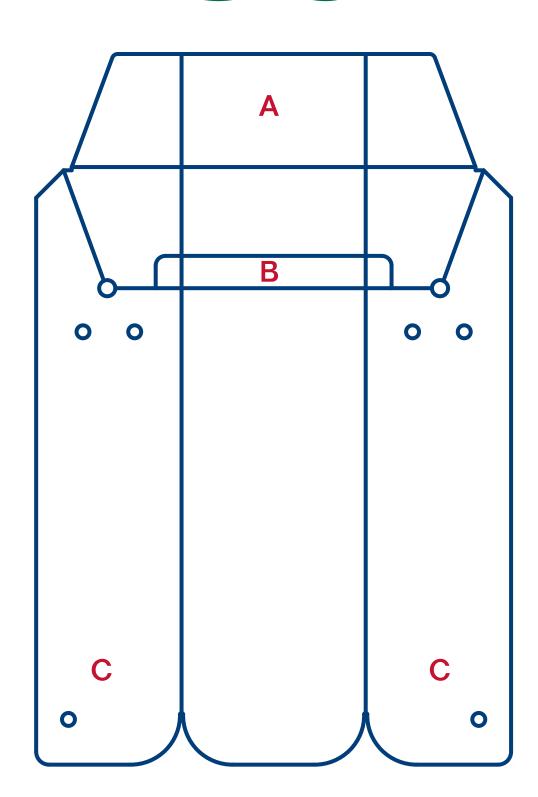


1. Unfold tri-folded Chute and hold printed side towards you.

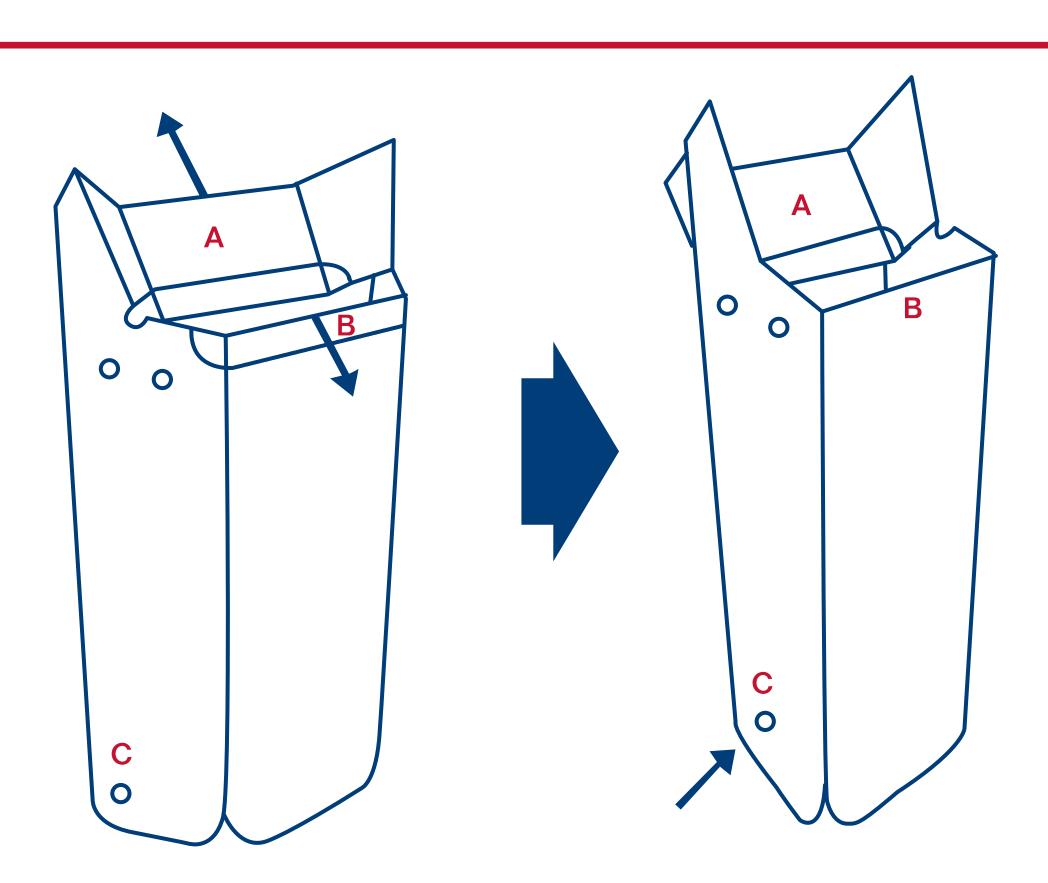

2. Push back panel A away from you while pulling forward panel B towards you. Push panel C together and pinch towards back.

Use on side OR upright

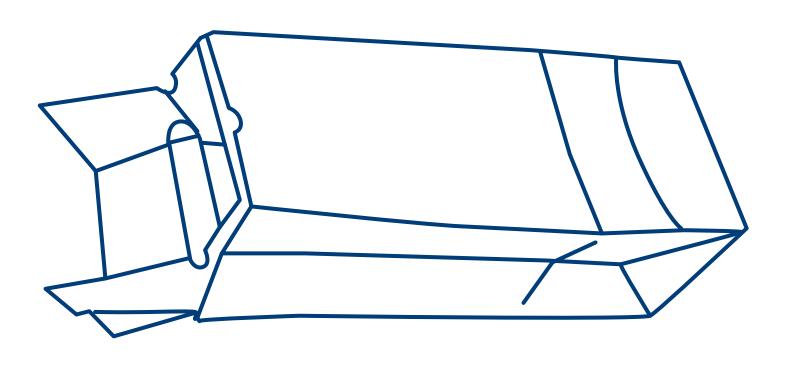

- 3. Lay chute on side and grasp EZ thumb and finger notches on bottom of chute with one hand. Slide folded ECOLO-CHUTE into open ECOLO-BAG.
- Use Laying down to rake in yard debris directly into the bag.
- Use ECOLO-BAG with ECOLO-CHUTE upright to hand drop in leaves and yard debris.